

ENFORCER[®]

SD-962H-6LB Escutcheon Lever Trim

Manual



- Compatible with the ENFORCER Grade 1 Rim-Type Exit Device (SD-962AR-36G)
- Lever handle can be set for right-handed or left-handed operation
- Includes high-security lock with two keys
- Actuating shaft telescopes to the proper length to fit almost any door size
- Attractive and durable finish for long-term operation

SLI SECO-LARM[®]

Note: Products with model numbers that end with "Q" or that have a round green "Q" sticker are RoHS compliant.

Specifications:


Type	Escutcheon lever trim
Construction	Zinc, US26D finish
Door type	1 ³ / ₄ " (44.5mm), 2" (51mm), 2 ¹ / ₄ " (57mm), 2 ¹ / ₂ " (63.5mm), or 3" (76mm) thick, wood or metal
Handing	Left or right (reversible)
Weight	4-lb (1.8kg)
Dimensions	10 ¹ / ₁₆ " x 2 ¹⁵ / ₁₆ " x 2 ³ / ₄ " (255x75x70 mm)

Parts List:


- 1x Escutcheon lever trim
- 1x Square handing pin
- 4x Mounting screws

- 1x Manual
- 1x Mounting template
- 2x Keys

Overview:

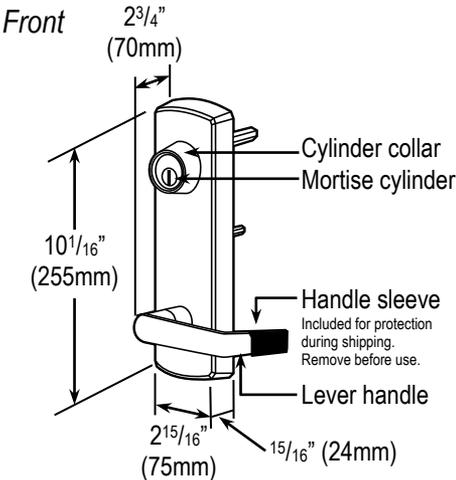


Back

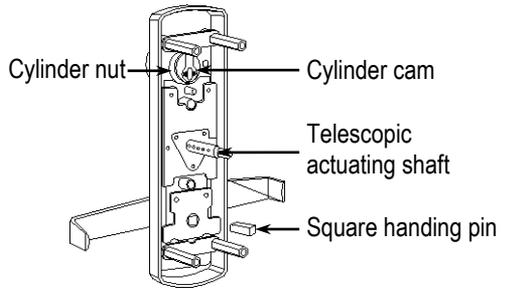

Setting the Trim Handing:


1. Remove the square handing pin as indicated in the diagram.
2. Turn the lever handle to the left or right, depending on the desired position.
3. When the position is set, return the square handing pin to its original location.

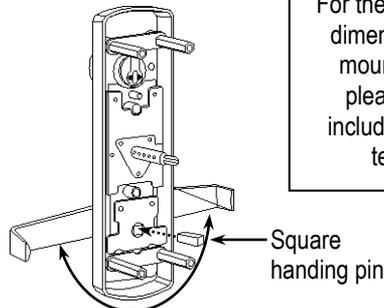

For the distance and dimensions of the mounting holes, please see the included mounting template.


Installing the Mortise Cylinder:

1. Pass the mortise cylinder through the cylinder spacer, cylinder collar, and escutcheon lever trim (see diagram).
2. Tighten the cylinder nut by hand, making sure the cylinder cam is facing up, then tighten the nut again with pliers while pushing in on the mortise cylinder.
3. Test the mortise cylinder with the key to ensure proper lock/unlock operation.

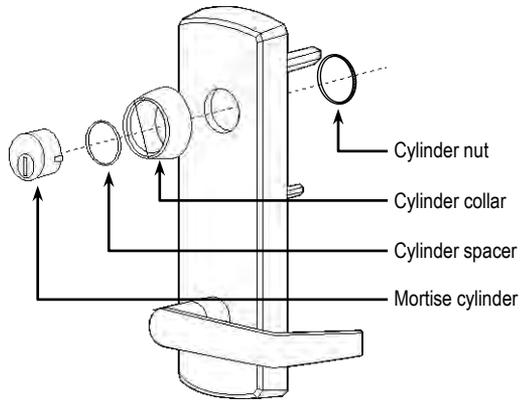

Marking and Drilling the Mounting Holes:

1. Use the included mounting template.
2. Mark the horizontal and vertical centerlines by matching the template to the rim-type exit device.
3. Mark and drill $\frac{1}{2}$ " holes for the mounting posts and a $\frac{5}{8}$ " hole for the actuating shaft, as shown on the included template.

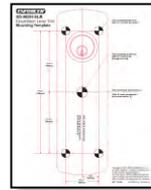


Use the included mounting template


Adjusting the Telescopic Actuating Shaft Length:

1. The telescopic actuating shaft comes preset for $1\frac{3}{4}$ " door thickness.
2. To adjust the length, use a screwdriver to remove the screw on the side of the shaft.
3. Pull the center of the shaft out until it is at the desired length (see below).
4. Replace the screw using a screwdriver.

Five positions for varying door thickness.

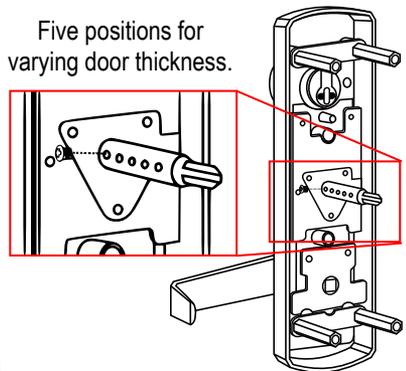


Corresponding door thickness

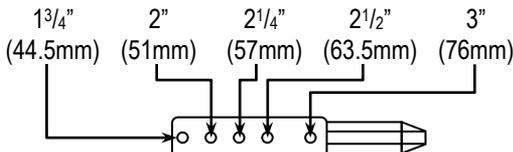

Installing the Escutcheon Lever Trim:

1. Attach the lever trim to the door by sliding the mounting posts and telescopic actuating shaft through the mounting holes (see page 2 for instructions on how to drill the mounting holes).
2. Connect the actuating shaft to the cam on the back of the rim-type exit device.
3. Mount the rim-type exit device to the mounting posts using the included mounting screws.

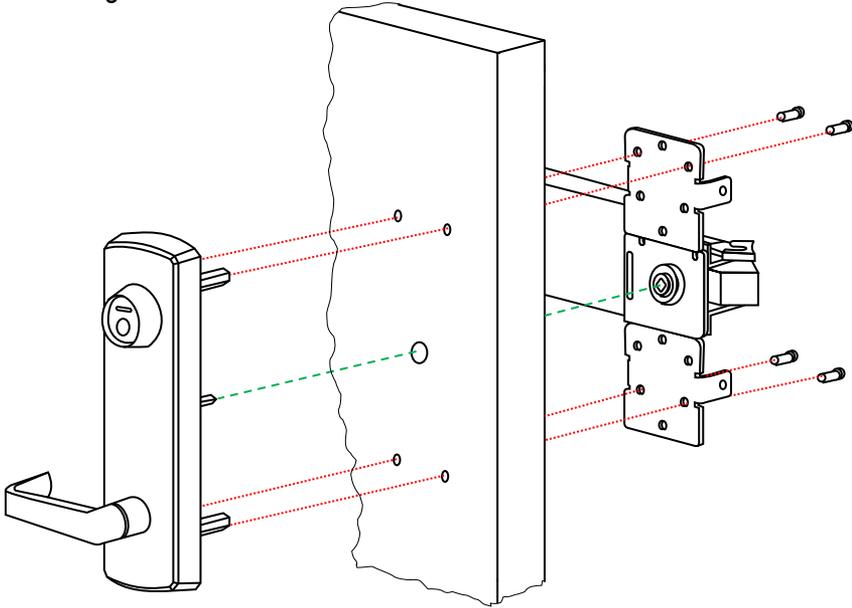

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM.

This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship.

The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE

The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors.

Copyright © 2013 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606
Tel: 800-662-0800 / 949-261-2999

Website: www.seco-larm.com
E-mail: sales@seco-larm.com



MISD-962H_6LB_1306.docx